


CONTAINER STATIONERY HOLDER

Instruction Sheet




CONTENTS

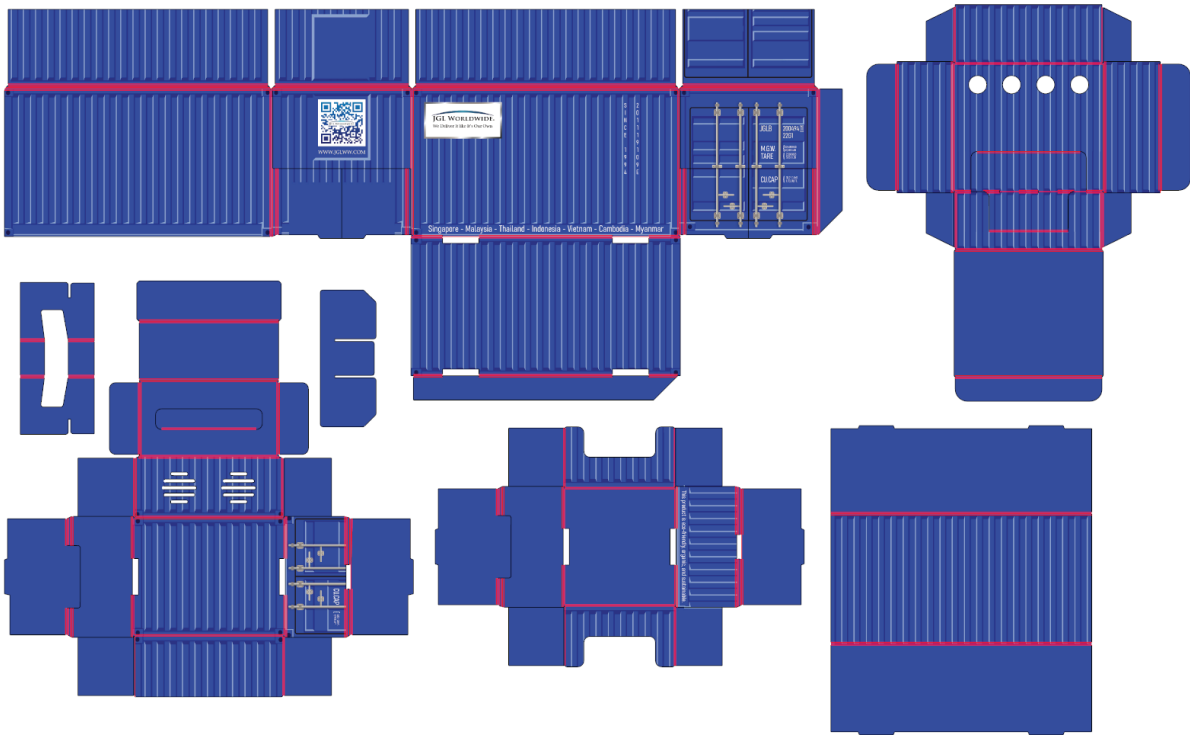


CONTAINER STATIONERY HOLDER

Instruction Sheet


1. Place the cardboard form on a flat surface and "exercise" the creases by bending them slightly back and forth

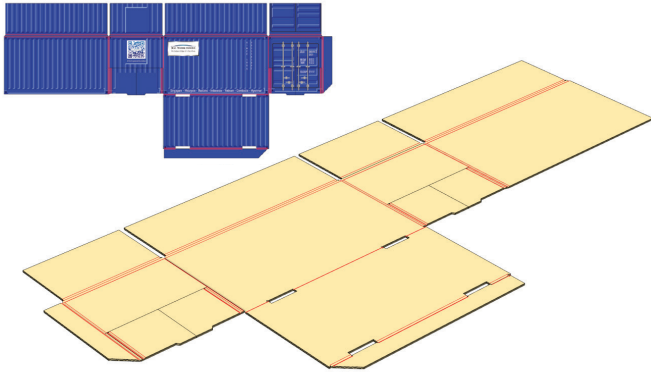


2. Remove the liner of the double sided tape and fold over the taped side to matching flaps.

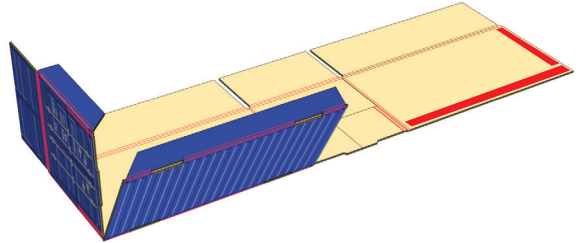


3. Fold over the front flaps to lock them in the opening at the bottom.
*Make sure to fold both the crease on each flap

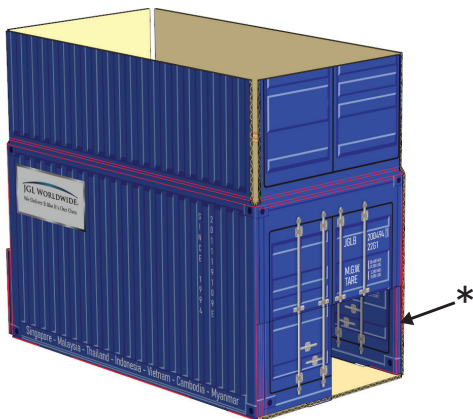


4. Fold the top flap into the box.
*Make sure to fold both the crease on each flap

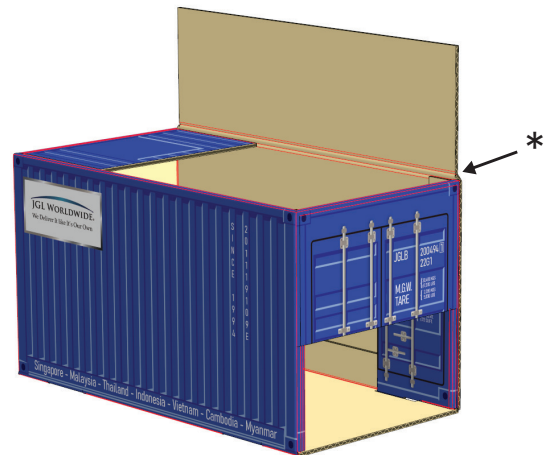

5. Place the cardboard form on a flat surface and "exercise" the creases by bending them slightly back and forth

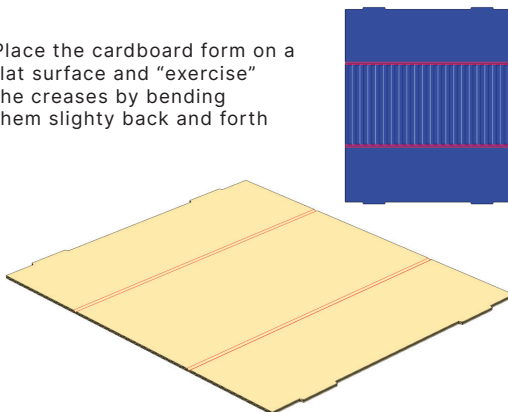



6. Insert the part into the box to lock them in the opening at the bottom.
*Make sure the part is over the front flaps.

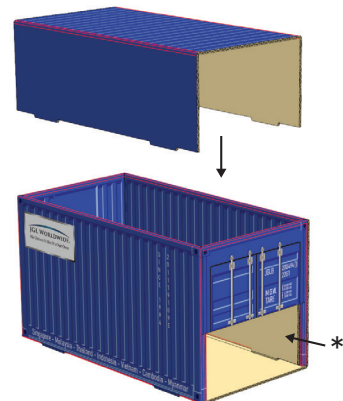


CONTAINER STATIONERY HOLDER

Instruction Sheet


1. Place the cardboard form on a flat surface and "exercise" the creases by bending them slightly back and forth

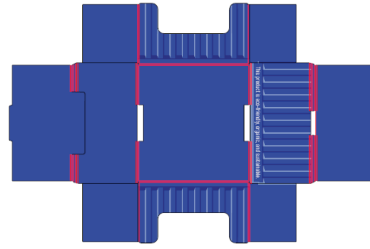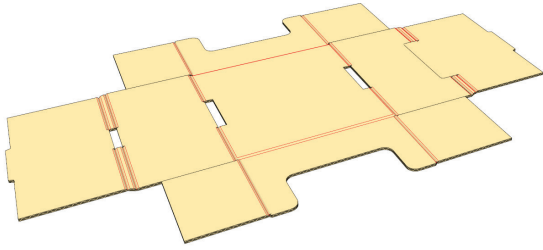


2. Fold up the front and back wall up and fold in the inner flaps

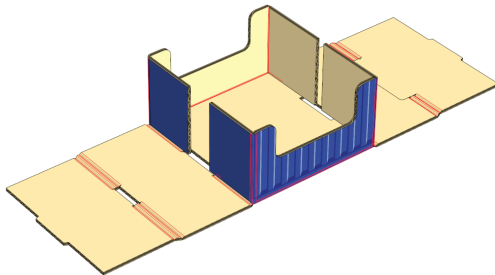


3. Fold the side walls in and lock them in the opening below
*Make sure the part is over the front flaps.

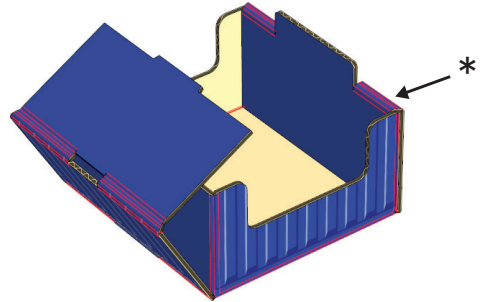


1. Place the cardboard form on a flat surface and "exercise" the creases by bending them slightly back and forth

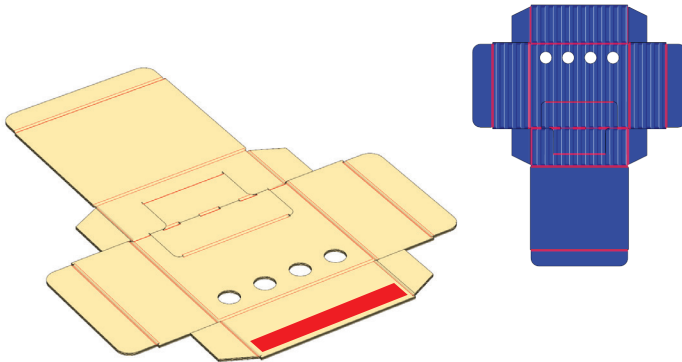


2. Remove the liner of the double sided tape and fold over the taped side to matching flaps.

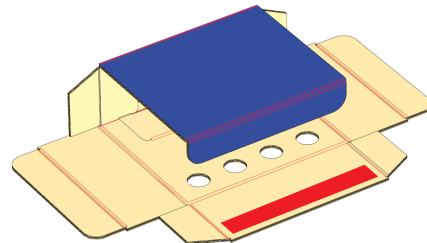

3. Fold in the front and back wall inner flaps and tuck in the side walls

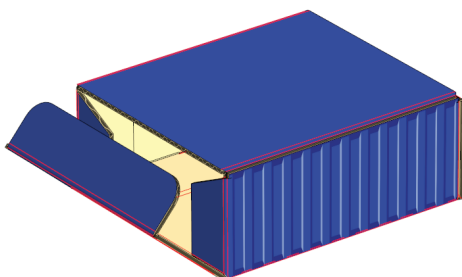


4. *Slowly push in the perforated crease

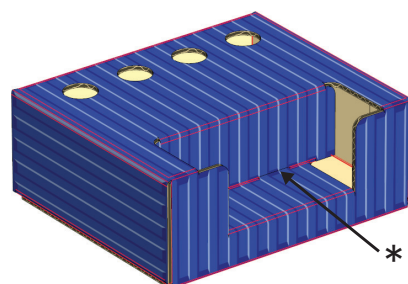


CONTAINER STATIONERY HOLDER

Instruction Sheet


1. Place the cardboard form on a flat surface and "exercise" the creases by bending them slightly back and forth

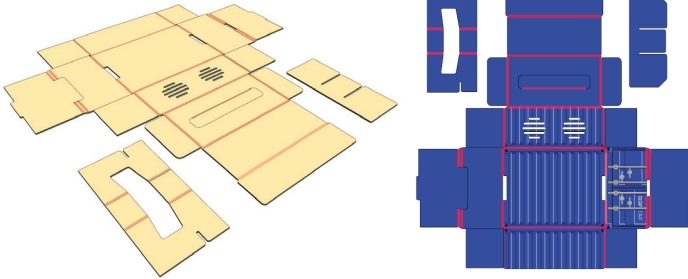


2. Fold up the front and back wall up and fold in the inner flaps

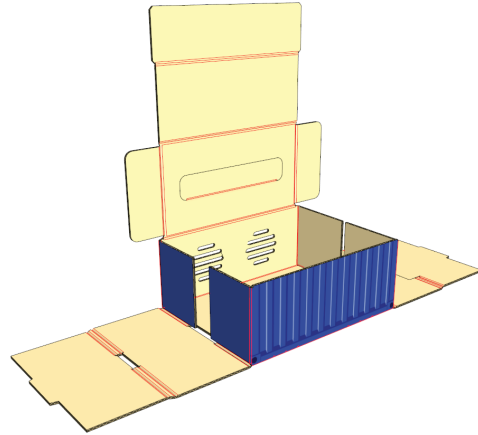


3. Fold the side walls in and lock them in the opening below
*Make sure the part is over the front flaps.

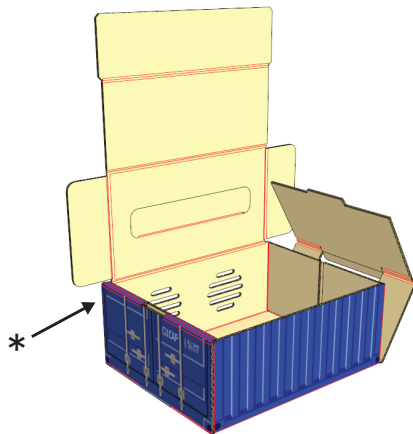

4. Slot the 2 pieces of holder and place it inside the box.
*slot should be away from the front grill

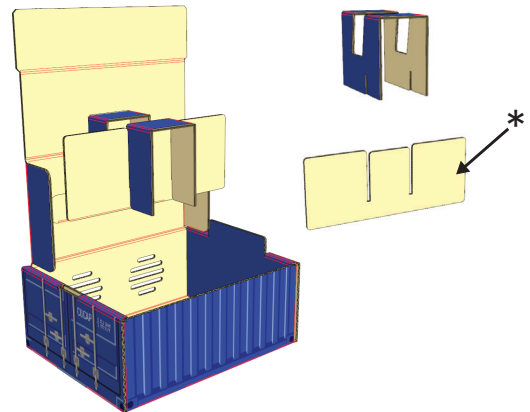

5. Fold in the front wall to close of the box

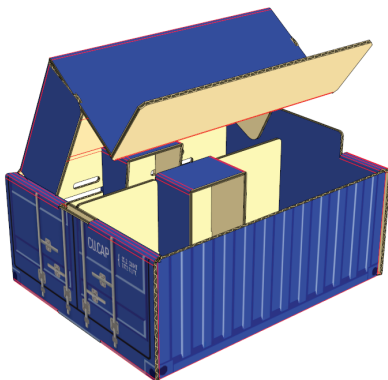

CONTAINER STATIONERY HOLDER

Instruction Sheet



Place the pencil & card holder
ontop of the box



Tilt both the left(post-it notes)
and right drawer(Phone holder)
to be inserted.

